
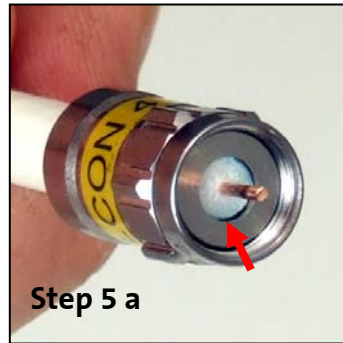
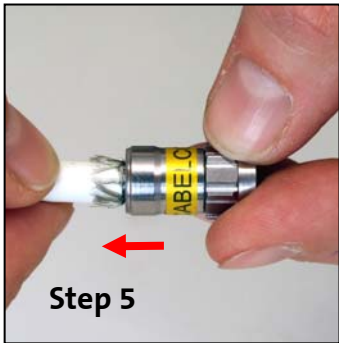
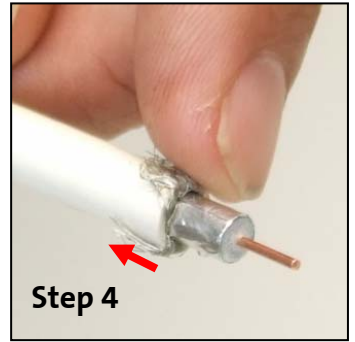
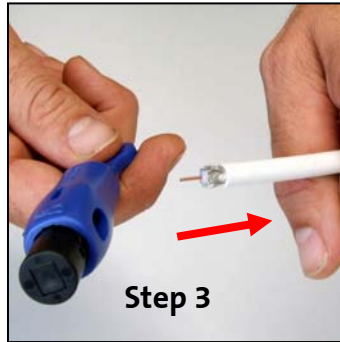


MOUNTING INSTRUCTIONS FOR SELF-INSTALL™ F-CONNECTORS

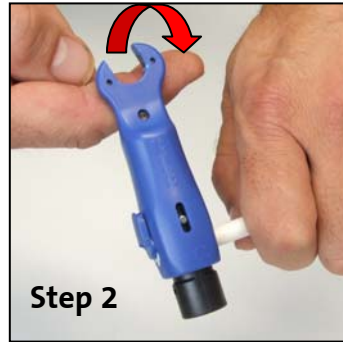

STEP 1: Press and hold the black button and insert cable until the mechanical stop as shown. Release the button.

STEP 2: Turn the tool clockwise 5-7 times.

STEP 3: Make sure to take a good grip both on tool and cable. Pull out the cable from the tools (without pressing the tool button!). Press the tool button and remove the scrap from the tool before another stripping takes place.

STEP 4: Fold exposed braid back over jacket as shown.

STEP 5: Push on the connector until the dielectric is flush with the support mandrel as shown (step 5 a).

STEP 6: Install to connector/cable by hand. In addition you can tighten the connectors using the wrench (Step 6 a).



Self-Install™ is
now available in
four sizes for
RG 6 & 59

Distributor:

ANEDiS[®]
Management GmbH

Am Spiegelberg 10
D - 92431 Neunburg v.W.
Tel.: +49 (9672) 915875
info@anedis-management.de

Corning Cabelcon ApS, Industriparken 10, DK 4760 Vordingborg
Tel: +45 55 98 55 99 · Fax: + 45 55 98 55 04
E-mail: cabelcon@cabelcon.dk · www.cabelcon.dk

CABELCON
connectors